

YOU DON'T NEED TO BE A "TECHNICIAN" TO MAINTAIN YOUR Epson® SureColor® F2000 Series Direct-to-Garment Printer!

- Scleaning and maintenance routines are "hassle-free".
- Maintenance kits are easy to replace.
- The fabric wiper system cleans the print head surface with "pristine" material before every garment imaging job and before the print head is parked, increasing print reliability.



EVERY DAY

→ Print an internal print head nozzle check pattern to verify nozzle health.

ONCE A WEEK

Clean the print head cleaning cap.

IF NEEDED

Perform an automatic print head cleaning cycle (ink is used).

WHEN NEEDED

→ Replace the air filter.

WHEN "INSTRUCTED" BY THE PRINTER (usually after printing approximately 1,000 shirts).

In under 3 minutes, you can replace/exchange the print head capping station; the print head fabric wiper and system and the print head flushing pad.



ABOUT ONCE A MONTH & WHEN INSTRUCTED BY THE PRINTER

-> Remove the color ink cartridges from the printer.

→ Manually shake them for 15 seconds.

Put the color ink cartridges back into the printer.



EVERY DAY & WHEN INSTRUCTED BY THE PRINTER

Remove the white ink cartridges from the printer.

→ Manually shake them for 15 seconds.

→Put the white ink cartridges back into the printer.

EVERY DAY

The printer performs a daily, automatic white ink calculation (no ink is used).

ABOUT ONCE A MONTH & WHEN INSTRUCTED BY THE PRINTER

→Perform a white ink purge (*ink is used*).